



UXBRIDGE Technology Team

EFFICIENT • PRACTICAL • EFFECTIVE

Chromebook Ports & Keyboard Buttons

By the Uxbridge Technology Department

Summary

This Guide will help you learn the identity of the Dell Chromebook ports and keyboard buttons.

Identifying Ports

Each Chromebook model has slightly different port setups. Please see the image below and the list of ports to help you identify the port setup for the Chromebook you and your child will be using.



- | | |
|--------------------------------|-------------------|
| 1. Headphone / Microphone Port | 5. Charging Port |
| 2. USB 3.0 Port | 6. HDMI Port |
| 3. Dell Chromebook Lock | 7. USB 3.1 Port |
| 4. Dell Activity Light | 8. SD Card Reader |



Using the Keyboard

Chromebook keyboards work like any regular keyboards with only a few differences. Please see the image below and the highlighted markers.



Go to the previous page



Go to the next page



Refresh your current page



Make your page full screen



Show all your open windows



Decrease screen brightness



Make the screen brighter



Turn off the sound



Lower the volume



Turn up the volume



Search your apps and the web, **Alt + Search** turns caps lock off and on

